

SPS - X2

Instructions & Troubleshooting

How to use:

- Turn the controller on and the 4th LED will flash 5 times. (refer to troubleshooting if it does not)
- Once the 4th LED is done flashing, you can turn the Rapid Fire on by pressing the sync button. When the 4th LED is solid, you are in Right Trigger only mode. When the 4th LED is flashing, you are in Dual Trigger mode.
- To program your “shots per second”, hold in the right trigger. While holding in the right trigger, press the sync button for .5 seconds. You will see the 4th LED flash 5 times. Release the trigger when it starts flashing. **NOTE: If you have a XCM shell installed, turn the LED's off before entering programming mode.**
- Once finished flashing, you are now in “programming mode”.
- Pull and release the trigger the amount of times you would like to shoot per second. Example: 11 pulls = 11 shots per second.
- Once you have pulled the trigger the amount of times you want it to fire per second, press the sync button again for .5 seconds. The 4th will flash the amount of times you pulled the trigger to confirm the “shots per second” you set it to.

Troubleshooting:

If you find your mod not working properly, follow these steps.

- Remove the battery pack for the controller.
- While the battery pack is removed, hold the sync button down.
- While holding the sync button, re-insert the battery pack and turn the controller on IMMEDIATELY!
- Keep holding the sync button until the 4th LED starts flashing.
- Once it stops flashing, you can release the sync button and you are ready to go!

