



1. As indicated by the picture, remove the 4 bottom left rubber stand and screws by using the screw driver provided. (keep the screws, don't lose them)

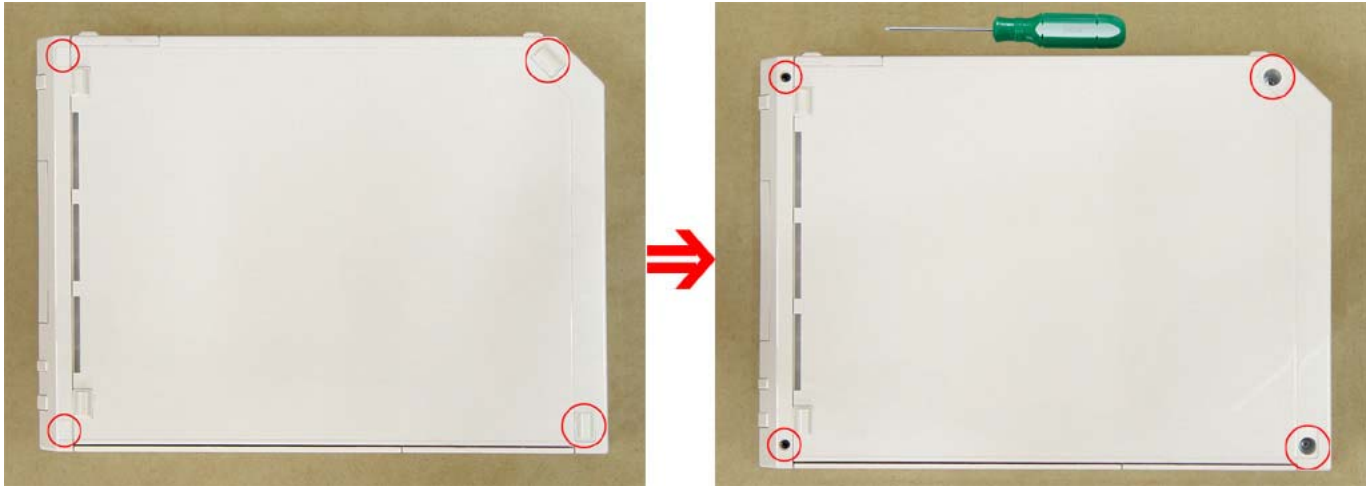

2.As indicated by the picture, remove the bottom rubber stand and screws by using the classic screw driver provided.

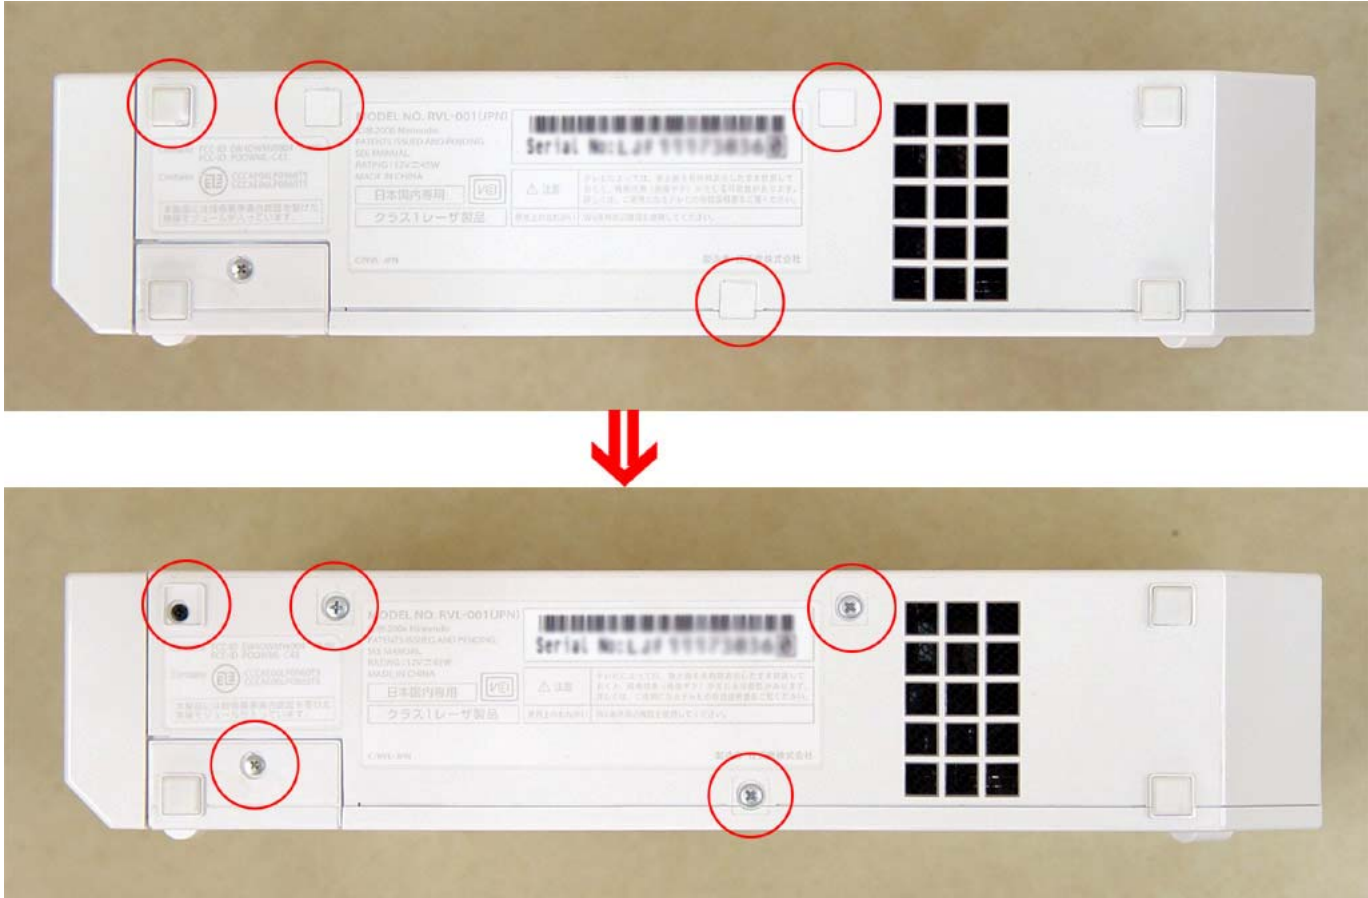

3.remove the battery and the screw.



4. Follow the instruction to take off these 2 plastic plates.




5. As indicated by the picture, remove those 3 screws by using the classic screw driver provided.




6. Remove the top plate of the console then those 4 screws.




7.As indicated by the picture, unplug the power source.

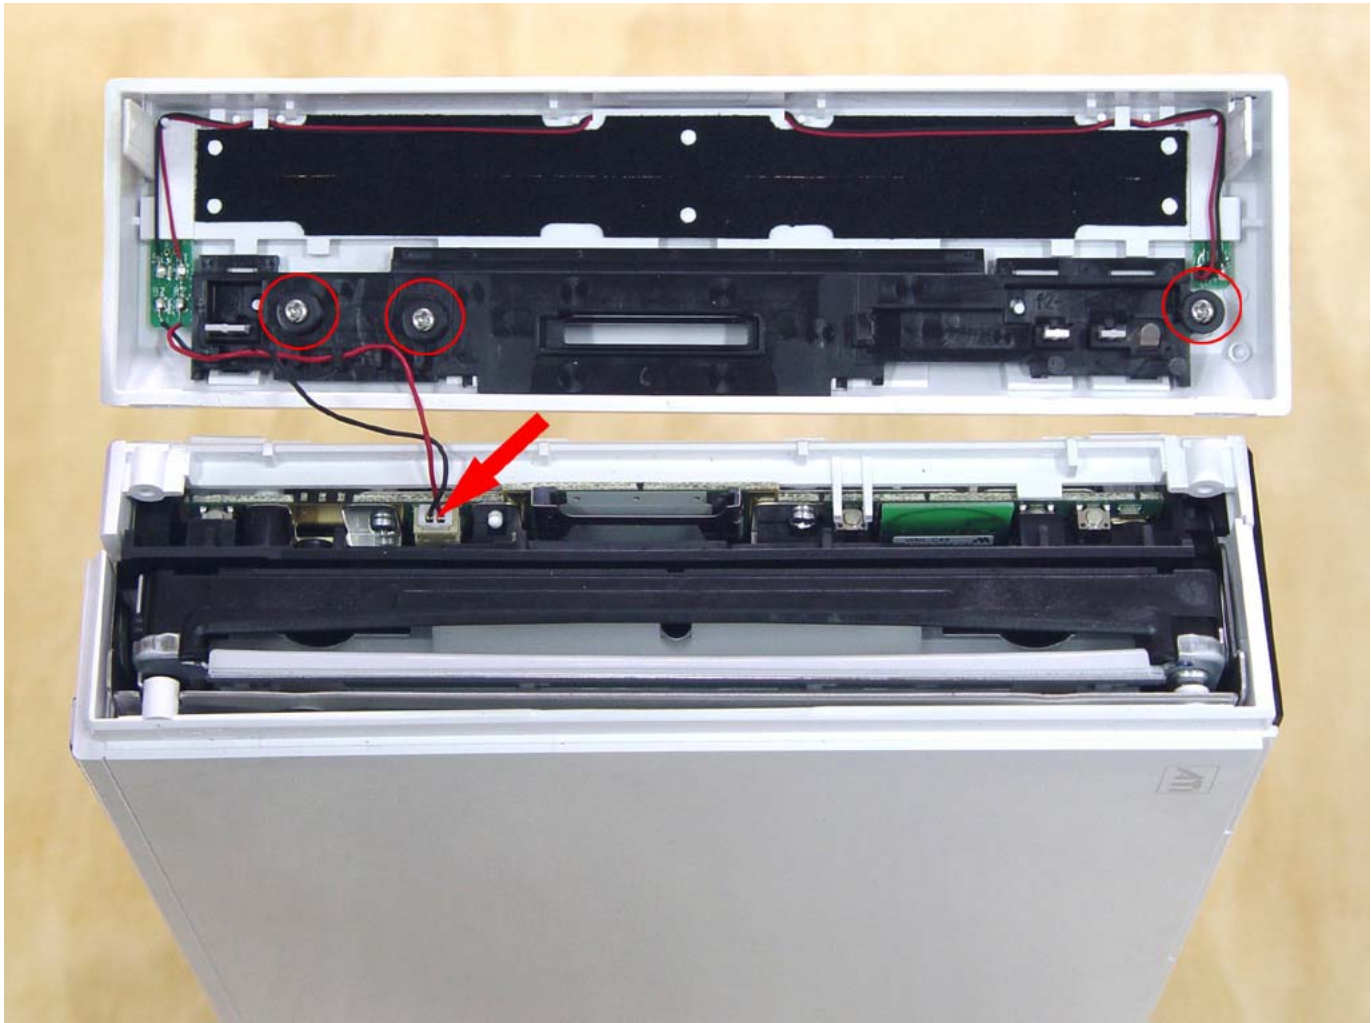


8. Remove the right plastic plate and the metal DVD rom cover, and take off the screws as indicated in the picture.

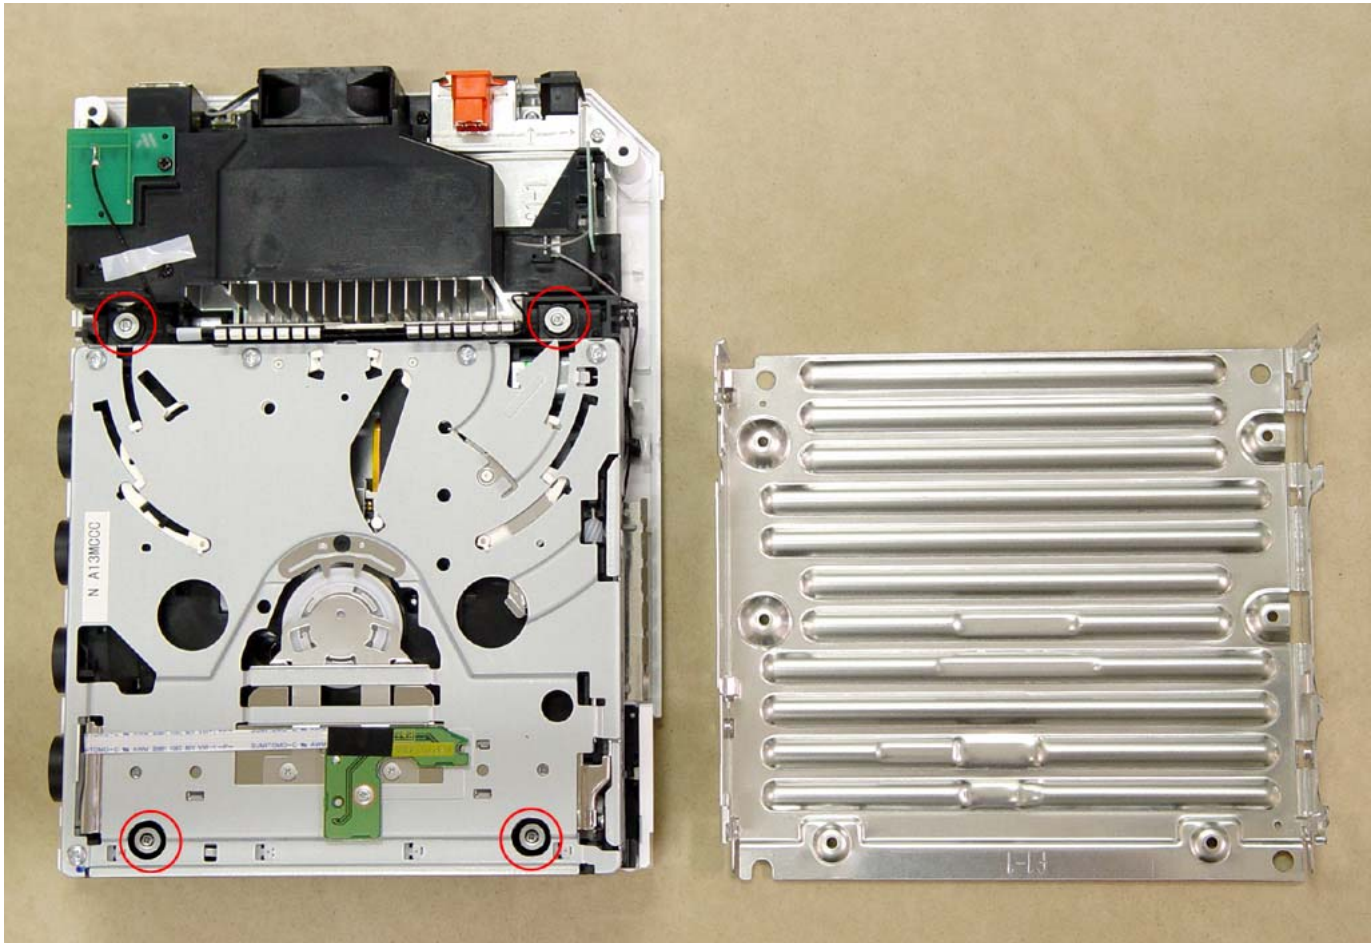


9. Open the DVD rom ,and follow the instruction of the number to take off the cables.

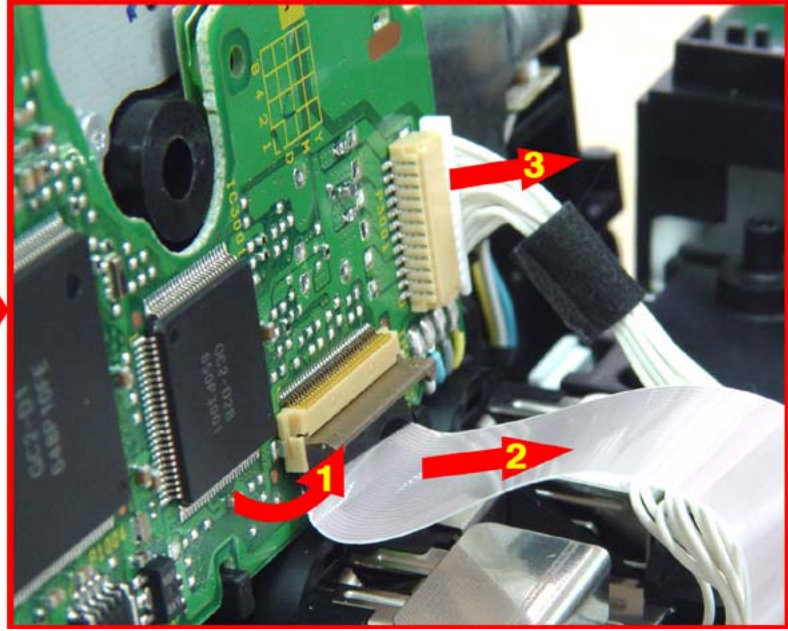


10.Remove those screws.

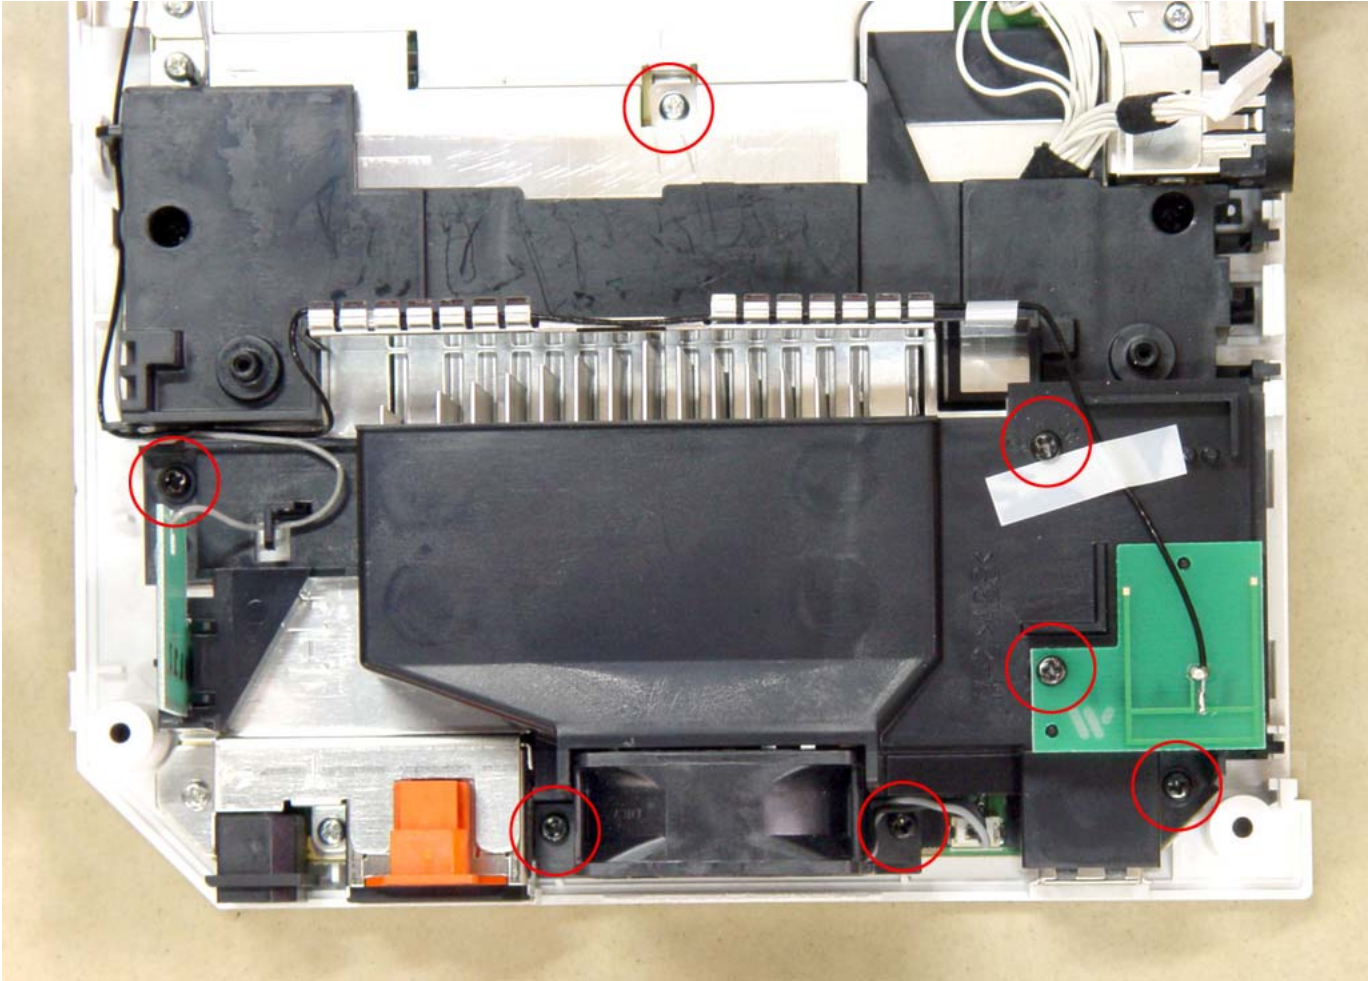


11.As shown in the picture, unplug the power source of the fan.

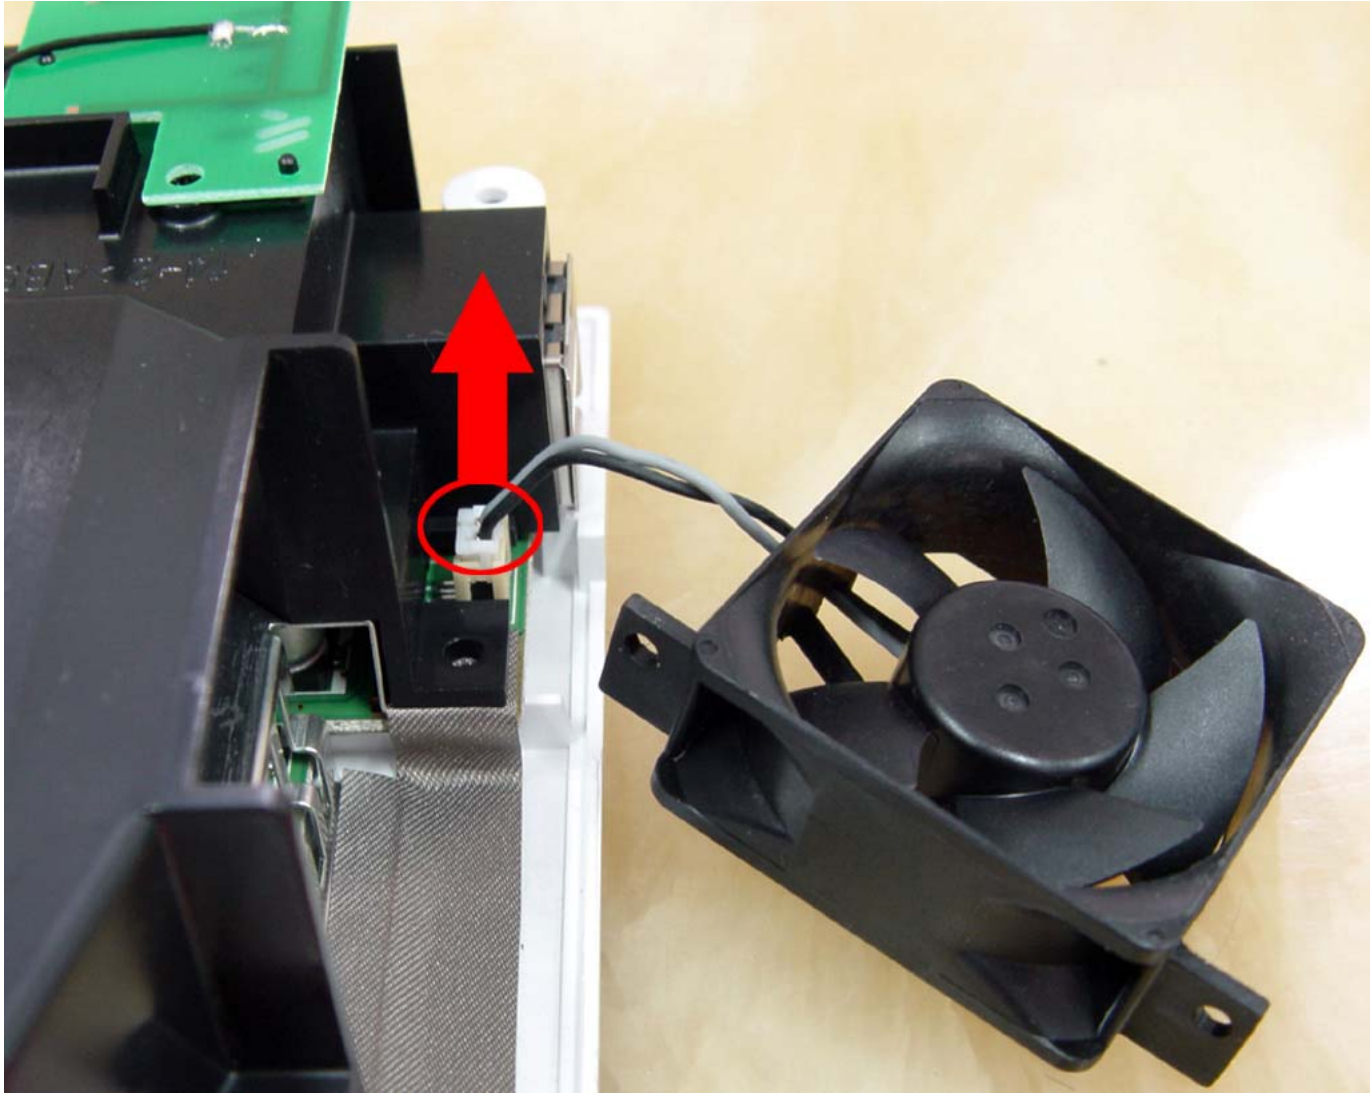


12.Remove the fan and the flow wind tunnel then take off 3 screws.

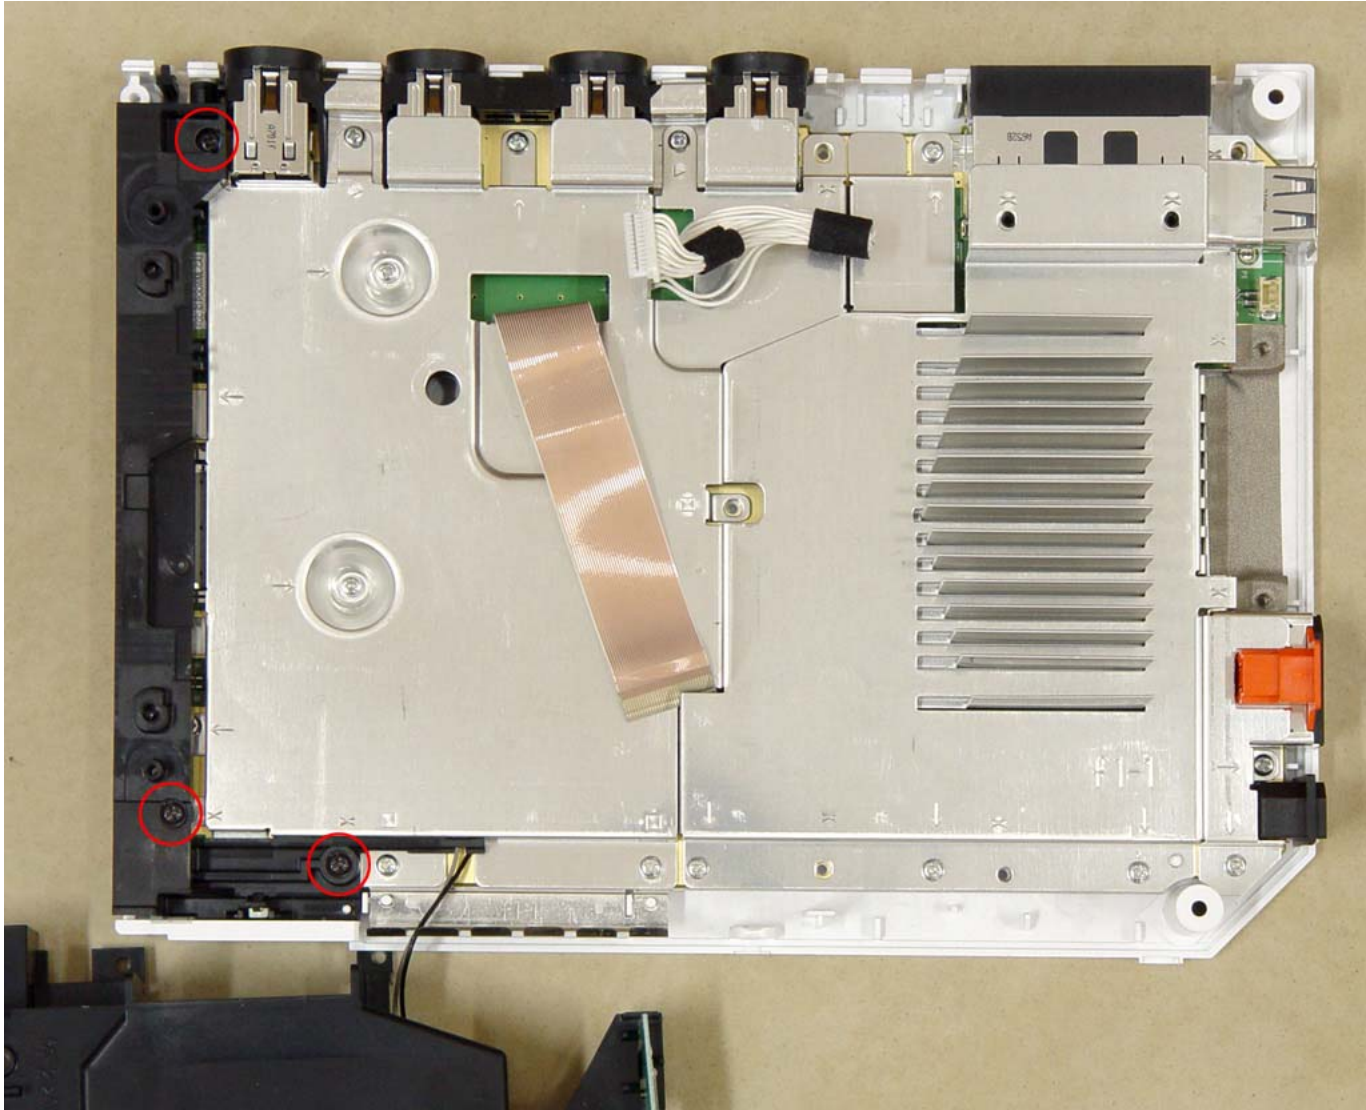


13. Remove the black plastic part then take off those 14 screws.

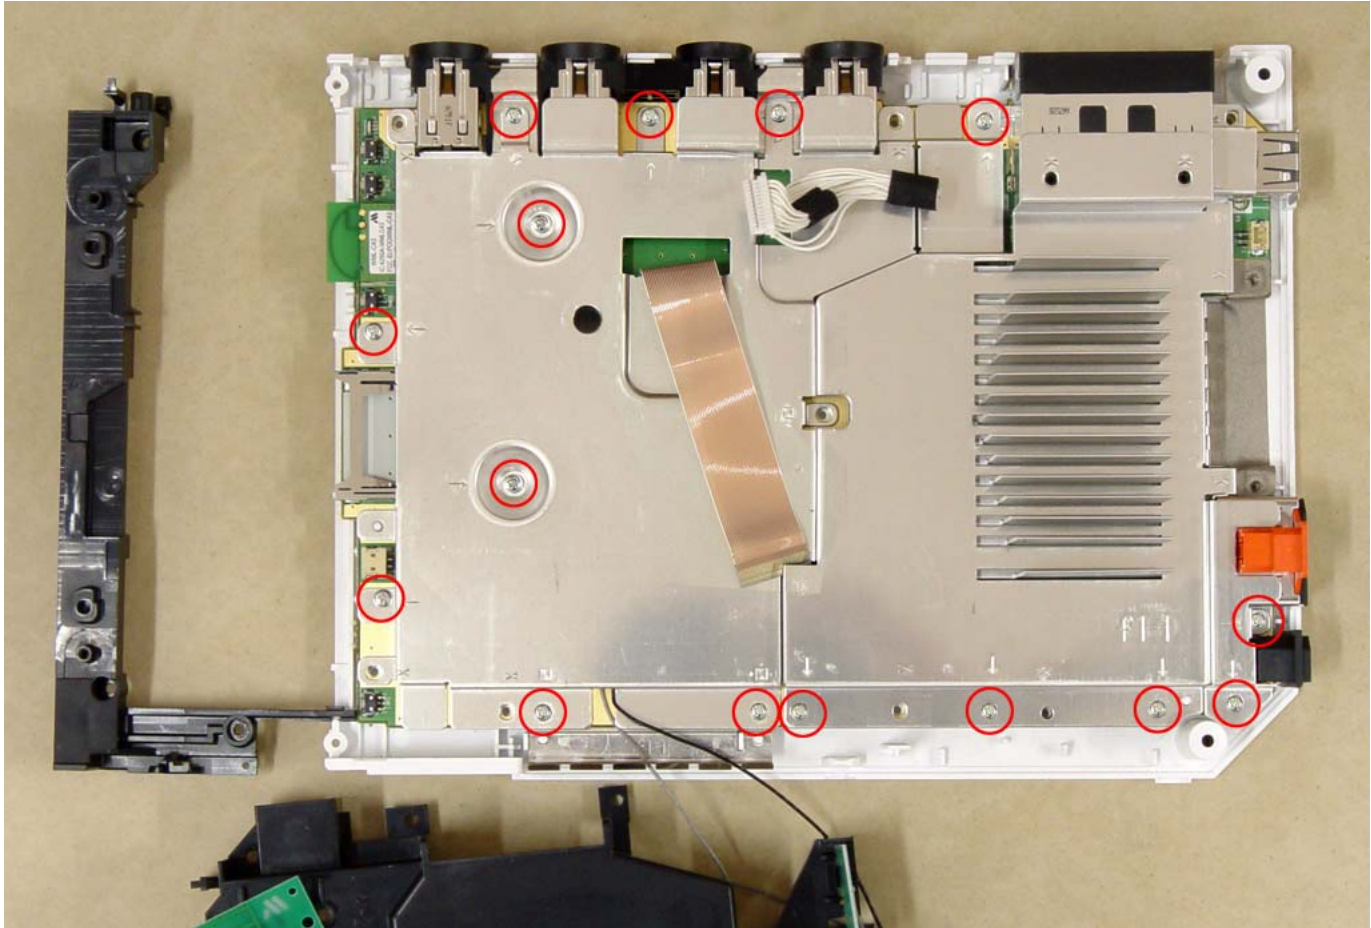

14. Take off the tape then remove the metal part.

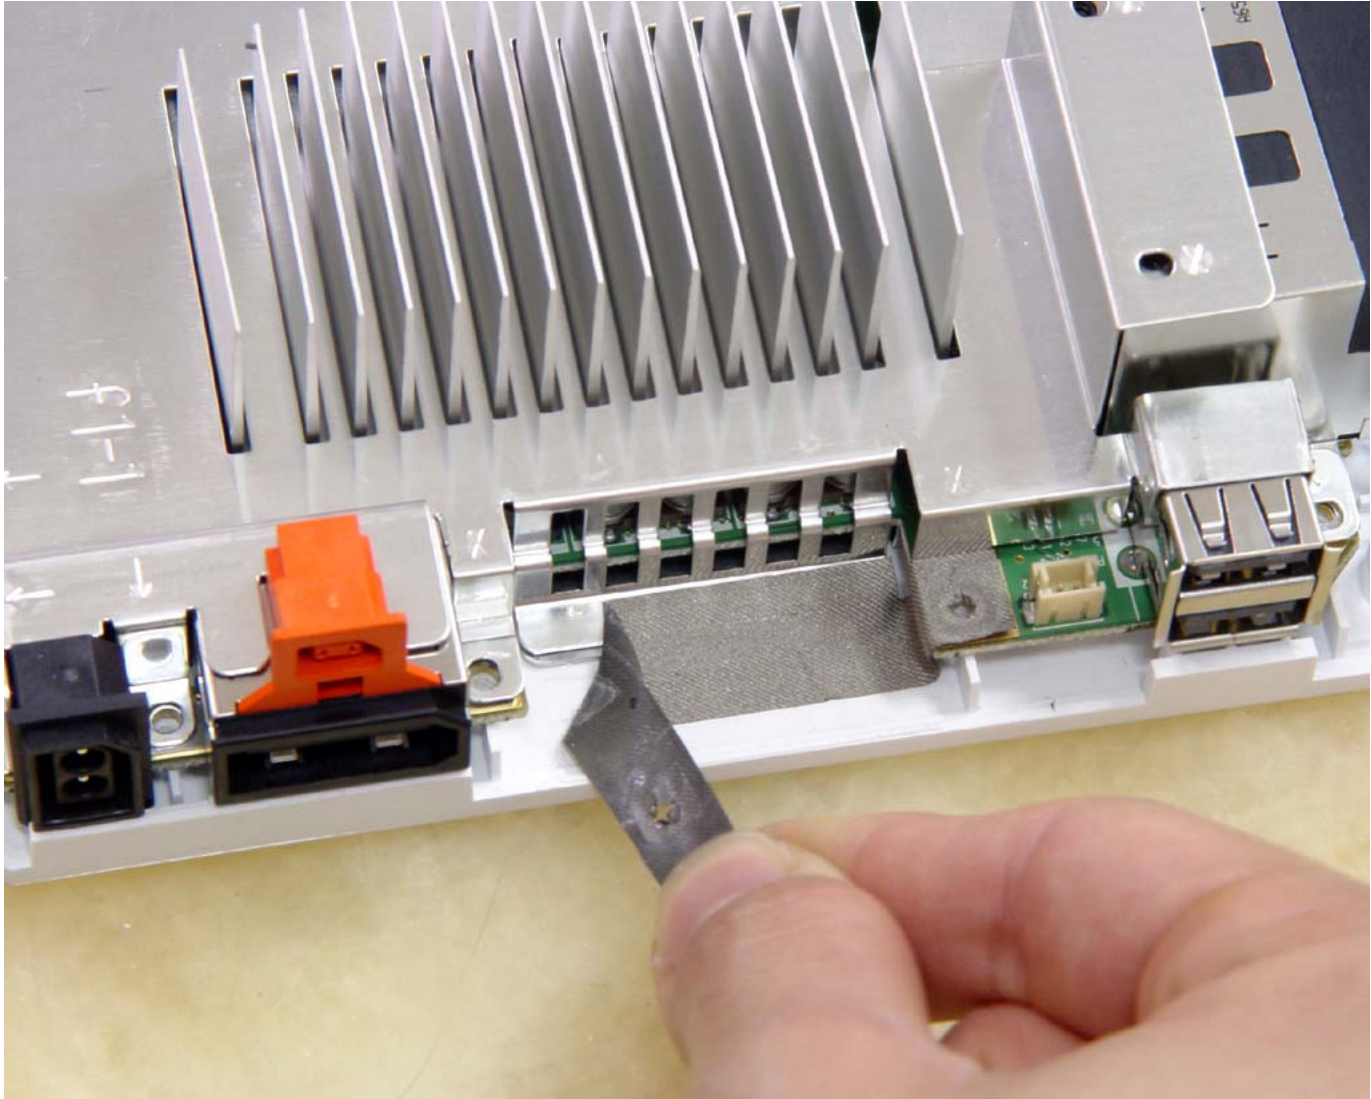

15. Take off 4 screws and remove the heat sink.

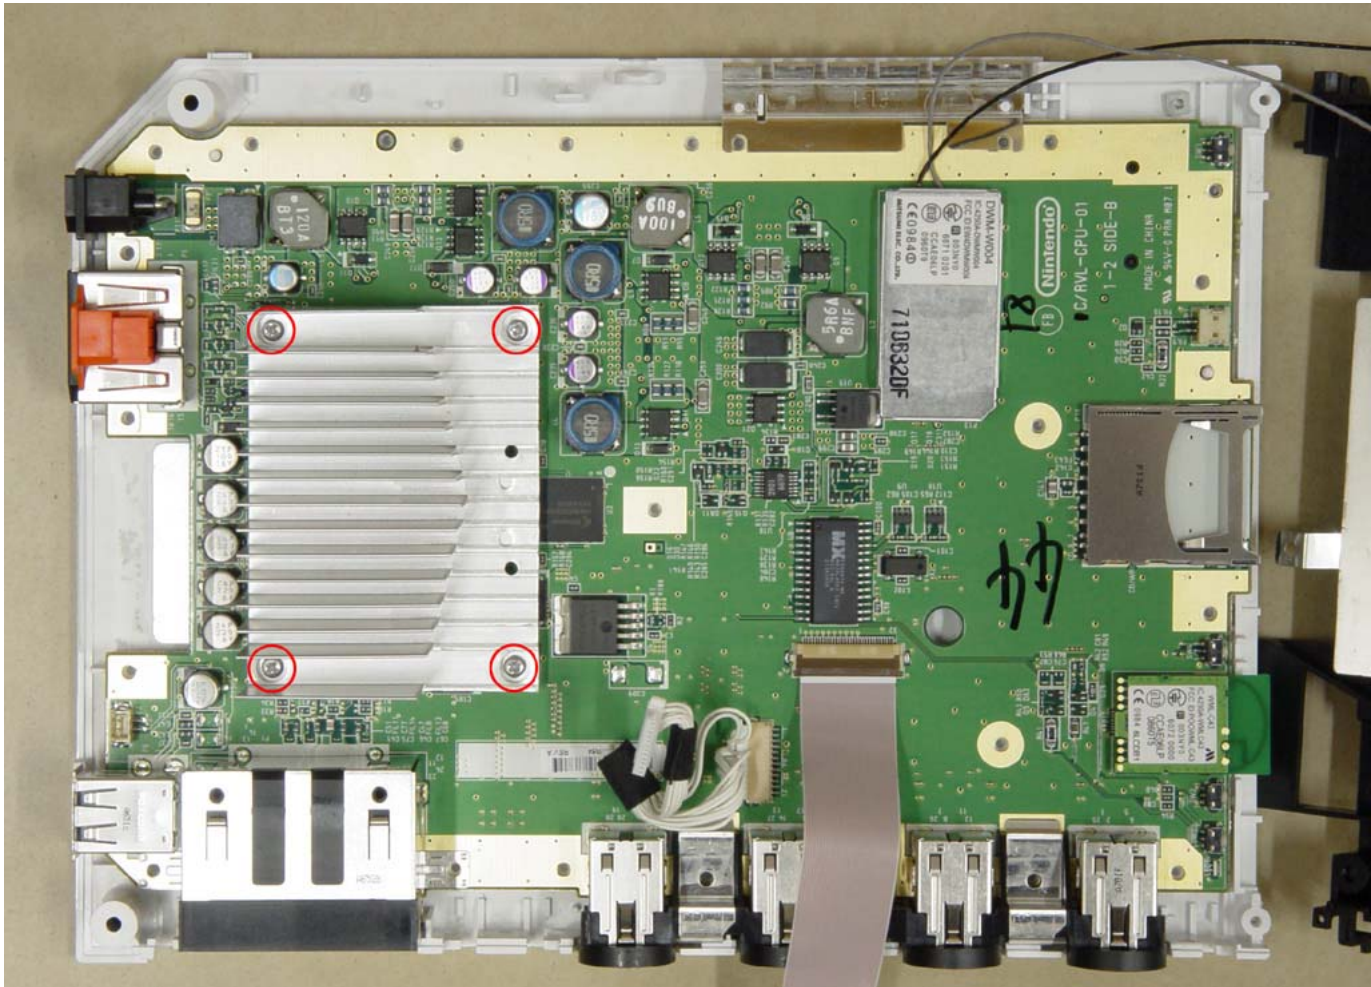

16.Remove all the parts from the left plastic plate, disassembly finished

